



Batch Configuration Software for Mac

User Manual

Legal Information

User Manual

©2018 Hangzhou Hikvision Digital Technology Co., Ltd.

About this Manual

This Manual is subject to domestic and international copyright protection. Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") reserves all rights to this manual. This manual cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision.

Please use this user manual under the guidance of professionals.

Trademarks

HIKVISION and other Hikvision marks are the property of Hikvision and are registered trademarks or the subject of applications for the same by Hikvision and/or its affiliates. Other trademarks mentioned in this manual are the properties of their respective owners. No right of license is given to use such trademarks without express permission.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS MANUAL. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF THE MANUAL, OR THE CORRECTNESS, ACCURACY, OR RELIABILITY OF INFORMATION CONTAINED HEREIN. YOUR USE OF THIS MANUAL AND ANY RELIANCE ON THIS MANUAL SHALL BE WHOLLY AT YOUR OWN RISK AND RESPONSIBILITY.




REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

Chapter 1 Introduction and Overview	1
1.1 Running Environment	1
Chapter 2 Manage Device	3
2.1 Create Password for Inactive Device(s)	3
2.2 Add Device	4
2.2.1 Add Online Device	4
2.2.2 Add Device by IP Address	5
2.2.3 Add Device by IP Segment	6
2.2.4 Add Device by Port Segment	7
2.2.5 Add Devices in a Batch	8
2.3 Edit Online Device's Network Parameters	8
2.4 Add Camera to NVR/Hybrid DVR	9
2.4.1 Add Online Camera to NVR/Hybrid DVR	9
2.4.2 Add Camera From Device List to NVR/Hybrid DVR	10
2.4.3 Manually Add Camera to NVR/Hybrid DVR	10
Chapter 3 Configure Device	12
3.1 Batch Configure General Parameters	12
3.2 Batch Configure System Parameters	12
3.3 Configure Device Parameters via ISAPI	13
3.4 Configure ONVIF	14
3.5 Configure CGI	14
3.6 Configure UPnP	15
3.7 One-Touch Configure Online Device	15
3.8 More Configurations	16
Chapter 4 Monitor Device	17
4.1 Monitor Device Status	17

4.2 Monitor Port Status	17
4.3 Export Monitoring Report	18
Chapter 5 Upgrade Device via Local File	19

Chapter 1 Introduction and Overview

Batch Configuration software is a versatile device management software for the DVRs, NVRs, IP cameras, encoders, and so on.

The software provides four function modules:

Device Configuration

Configure the devices in a batch, such as ONVIF configuration, video parameters configuration, wiper control, and so on.

Device Management

Manage the devices, such as adding device to the client, adding network cameras to NVR or hybrid DVR, and so on.

Online Device Search via SADP

Display the online devices in the same local subnet with the client software in the SADP list and manage the online devices, such as adding device to the software, activating the device, and so on.

Error Message

Display the error message when there's an error occurred during operation.

This user manual describes the functions and configurations steps of the client software. To ensure the properness of usage and stability of the software, refer to the contents below and read the manual carefully before installation and operation.

1.1 Running Environment

The followings are the recommended running environment for installing the software.

Operating System

MAC 10.10 (64-bit)



Note

For MAC10, if the software is exceptional, you should run the software as administrator.

CPU

Intel Core 2 or Above

RAM

1G or Above

Video Card

RADEON X700 Series

Display

1024*768 resolution or Above

Chapter 2 Manage Device

You can manage devices on the client, including adding, editing, and deleting the devices. You can also perform operations such as restoring.

2.1 Create Password for Inactive Device(s)

For some detected online devices, you are required to create the password to activate them before adding them to the client. Besides activating the device one by one, you can also deal with multiple ones at the same time. The devices which are activated in a batch will have the same password.

Before You Start

- Make sure the devices (cameras, DVR, etc.) you are going to use are correctly installed and connected to the network as specified by the manufacturers. Such initial configuration is required in order to be able to connect the devices to the software via network.
- This function should be supported by the device. Make sure the devices you want to activate support this function.

Perform this task when you need to activate the detected online devices.

Steps

1. Run the Batch Configuration software.

The online devices in the same local subnet with the PC installed the client are displayed on the SADP panel.

2. View the device status (shown on Security column) and select one or multiple inactive devices.
3. Click **Activate** to pop up the Activate window.
4. Create a password in the password field, and confirm the password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. Click **OK**.
6. **Optional:** Click **Edit Network Parameters** to change its IP address, subnet mask, and gateway to the same subnet with your computer if you need to add the device to the client. For details, refer to *Edit Online Device's Network Parameters* .

2.2 Add Device

After running the client, devices including network cameras, DVRs, NVRs, decoders, security control panels, video intercom devices, etc., should be added to the client for configuration, monitoring, and upgrading.

2.2.1 Add Online Device

The active online devices in the same local subnet with the PC installed the client will be displayed on a list. You can add one online device at a time, or add multiple online devices in a batch.

Before You Start

- Make sure the devices you are going to use are correctly installed and connected to the network as specified by the manufacturers. Such initial configuration is required in order to be able to connect the devices to the software via network.
- The devices to be added should be activated. Refer to **Create Password for Inactive Device(s)** for detailed operation about activating devices.

Perform this task when you need to add the online devices.

Steps

1. Run the Batch Configuration software.

The online devices in the same local subnet with the PC installed the client are displayed on the SADP panel.

2. Select one or more detected online devices.
3. Click **Add** on the SADP panel.
4. Input the required information, including user name and password.




Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.


Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. Click **OK**.
6. **Optional:** After adding devices, you can do one of more followings.

Device Upgrading

Click  to upgrade the device. See **Upgrade Device via Local File** for details.

Access Device via Internet Explore Browser

Click  to access the device via the Internet Explore browser. You can manage and operate the device. See the user manual of the device for details.

2.2.2 Add Device by IP Address

When you know the IP address of the device to add, you can add the device to the client by specifying the IP address, user name, password, and other related parameters.

Before You Start

Make sure the devices (cameras, DVR, etc.) you are going to use are correctly installed.

Perform this task when you need to add device by IP address.

Steps

1. Run the Batch Configuration software.
2. Click **Add** on the Device Management panel to open Add Device page.
3. Select **IP Address** as the adding mode.
4. Input the required information.



Note

By default, the device port No. is 8000.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. **Optional:** Check **Add Offline Device** to add the offline device.




Note


When the offline device comes online, you can click **Refresh** to connect the device to the software.

6. Click **OK**.
7. **Optional:** After adding devices, you can do one of more followings.

Device Upgrading

Click  to upgrade the device. See **Upgrade Device via Local File** for details.

Access Device via Internet Explore Browser

Click  to access the device via the Internet Explore browser. You can manage and operate the device. See the user manual of the device for details.

2.2.3 Add Device by IP Segment

If the devices having the same user name and password, and their IP addresses are between the IP segment, you can specify the start IP address and the end IP address, user name, password, and other related parameters to add them.

Before You Start

Make sure the devices (cameras, DVR, etc.) you are going to use are correctly installed.

Perform this task when you need to add device by IP segment.

Steps

1. Run the Batch Configuration software.
2. Click **Add** on the Device Management panel to open Add Device page.
3. Select **IP Segment** as the adding mode.
4. Input the required information.

Note

By default, the device port No. is 8000.

Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.


5. **Optional:** Check **Add Offline Device** to add the offline device.
-

Note


When the offline device comes online, you can click **Refresh** to connect the device to the software.

6. Click **OK**.
7. **Optional:** After adding devices, you can do one of more followings.

Device Upgrading

Click  to upgrade the device. See **Upgrade Device via Local File** for details.

Access Device via Internet Explore Browser

Click  to access the device via the Internet Explore browser. You can manage and operate the device. See the user manual of the device for details.

2.2.4 Add Device by Port Segment

If the devices having the same user name, password, and IP address, and their port No. are between the port segment, you can specify the start port No. and the end port No., user name, password, and other related parameters to add them.

Before You Start

Make sure the devices (cameras, DVR, etc.) you are going to use are correctly installed.

Perform this task when you need to add device by port segment.

Steps

1. Run the Batch Configuration software.
2. Click **Add** on the Device Management panel to open Add Device page.
3. Select **Port Segment** as the adding mode.
4. Input the required information.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

-
5. **Optional:** Check **Add Offline Device** to add the offline device.




Note


When the offline device comes online, you can click **Refresh** to connect the device to the software.

-
6. Click **OK**.
 7. **Optional:** After adding devices, you can do one of more followings.

Device Upgrading

Click  to upgrade the device. See **Upgrade Device via Local File** for details.

Access Device via Internet Explore Browser

Click  to access the device via the Internet Explore browser. You can manage and operate the device. See the user manual of the device for details.

2.2.5 Add Devices in a Batch


You can input the device information into the predefined template to add multiple devices at a time.

Before You Start


Make sure the devices (cameras, DVR, etc.) you are going to use are correctly installed.

Perform this task when you need to add devices by importing the template which contains information of multiple devices.


Steps

1. Run the Batch Configuration software.
2. Click **Add** on the Device Management panel to open Add Device page.
3. Select **Batch Import** as the adding mode.
4. Click **Export** and save the predefined template (CSV file) on your PC.
5. Open the exported template file and input the required information of the devices to be added on the corresponding column.
6. Click  and select the template file.
7. Click **OK**.
8. **Optional:** After adding devices, you can do one of more followings.

Device Upgrading

Click  to upgrade the device. See **Upgrade Device via Local File** for details.

Access Device via Internet Explore Browser

Click  to access the device via the Internet Explore browser. You can manage and operate the device. See the user manual of the device for details.

2.3 Edit Online Device's Network Parameters

For the detected online devices, you can edit their network information as desired (e.g., change the device IP address due to the changes of the network).

Before You Start

For some devices, you must activate it before editing its network information. For details, refer to **Create Password for Inactive Device(s)** .

Perform this task when you need to edit the network information for the detected online devices.

Steps

1. Run the Batch Configuration software.
The online devices in the same local subnet with the PC installed the client are displayed on the SADP panel.
2. Click **Edit Network Parameters** to open Edit Network Parameters page.

- 3. Optional:** Check **Enable DHCP** to get the device network information, such as IP address, subnet mask, etc., automatically.

 **Note**

- The IPv6 should be supported by the device.
 - The DHCP function should be supported by the device and the router that the device connected with.
-

4. Edit the network parameters as desired.
5. Input the administrator password.
6. Click **OK**.

2.4 Add Camera to NVR/Hybrid DVR

You can add the cameras to NVR or hybrid DVR to quickly get the live view, play back the video files, and do some other operations of the cameras via NVR or hybrid DVR.

2.4.1 Add Online Camera to NVR/Hybrid DVR

You can add the online devices searched via SADP to NVR or hybrid DVR


Before You Start

- Make sure the devices (cameras, NVR, etc.) you are going to use are correctly installed and connected to the network as specified by the manufacturers. Such initial configuration is required in order to be able to connect the cameras to the NRV or hybrid DVR via network.
- Add the NVR or hybrid DVR to the software. See **Add Device** for details.

Perform this task when you need to add online cameras to NVR or hybrid DVR.

Steps

1. Run the Batch Configuration software.
The added NVR and hybrid DVR are displayed in the device list and the online devices in the same local subnet with the PC installed the client are displayed on the SADP panel.
2. Select one NVR or hybrid DVR.
3. Click **Add IPC** to open Add IPC page.
4. Select **SADP List** as the adding mode.
5. Select the online camera listed on the SADP panel.
6. Input the required information, including user name and password.

 **Caution**

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least

three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

7. Click **OK**.

2.4.2 Add Camera From Device List to NVR/Hybrid DVR

When the network cameras are added to the software, you can add them to NVR or hybrid DVR directly.

Before You Start

- Make sure the devices (cameras, NVR, etc.) you are going to use are correctly installed and connected to the network as specified by the manufacturers. Such initial configuration is required in order to be able to connect the cameras to the NRV or hybrid DVR via network.
- Add the NVR or hybrid DVR and network cameras to the software. See **Add Device** for details.

Perform this task when you need to add the cameras from the device list to the NVR or hybrid DVR.

Steps

1. Run the Batch Configuration software.

The added NVR, hybrid DVR, or network cameras are displayed in the device list.

2. Select one NVR or hybrid DVR.

3. Click **Add IPC** to open Add IPC page.

4. Select **Device List** as the adding mode.

5. Select the added cameras listed in the device list.

6. Click **OK**.

2.4.3 Manually Add Camera to NVR/Hybrid DVR

When you know the camera's IP address, or the cameras have the same user name and password and their IP addresses are between the IP segment, or the cameras have the same user name and password and their port No. are between the port segment, you can add cameras to NVR or Hybrid DVR by IP address, IP segment, or port segment. You can also add cameras to NVR or hybrid DVR in a batch.

Before You Start

- Make sure the devices (cameras, NVR, etc.) you are going to use are correctly installed and connected to the network as specified by the manufacturers. Such initial configuration is required in order to be able to connect the cameras to the NRV or hybrid DVR via network.
- Add one NVR or hybrid DVR to the software. See **Add Device** for details.

Perform this task when you need to add cameras to NVR or hybrid DVR manually.

Steps

1. Run the Batch Configuration software.

The added NVRs or hybrid DVRs are displayed in the device list.

2. Select one NVR or hybrid DVR.

3. Click **Add IPC** to open Add IPC page.

4. Add the camera to NVR or hybrid DVR.

- Add camera to NVR or hybrid DVR by IP address. For details, refer to **Add Device by IP Address** .
- Add cameras to DVR or hybrid DVR by IP segment. For details, refer to **Add Device by IP Segment** .
- Add cameras to DVR or hybrid DVR by port segment. For details, refer to **Add Device by Port Segment** .
- Add cameras to DVR or hybrid DVR in a batch. For details, refer to **Add Devices in a Batch** .

Chapter 3 Configure Device

You can configure the device parameters, video parameters, and system parameters in a batch. You can also configure ONVIF and CGI settings for devices. Other configurations are also available: wiper control, restoring default parameters, UPnP settings, and so on.

3.1 Batch Configure General Parameters

You can configure the frequently-used parameters, such as CCD, video and audio, DST, exception etc., for the devices in a batch.

Before You Start

Add at least two devices. See **Add Device** for details.

Perform this task when you need to configure the general parameters for the devices in a batch.

Steps

1. Select two or more devices.
2. Click **Batch Configuration** to open Batch Configuration page.
3. Select parameters to copy their settings from the device.



The device should have the same model and firmware version with the devices to be configured.

You can view the device firmware version and device type.

4. Click **Configuration** to pop up Remote Configuration window.
5. Set the parameters according to the actual needs. See the user manual of the device for details.
6. Check the parameter(s) you want to copy from the device.



The available parameters may vary with the devices.

7. Click **OK**.

Result

The settings of the selected parameters from the device can be copied to the devices you want to configure in a batch.

3.2 Batch Configure System Parameters


You can configure the system parameters in a batch for the device by importing a configuration file exported from the device.

Before You Start

Add the device to the software. See **Add Device** for details.

Perform this task when you need to configure system parameters in a batch for one or more devices.

Steps

1. Select one device in the list.
2. Click **System** → **System Maintenance** → **Export Configuration File** and save the configuration file to your PC.
3. Select the device(s) you want to configure.
4. Click **Bin**.
5. Click  and select the bin file.
6. Click **OK**.

Result

The system parameters can be set according to the bin file exported from a pre-configured device.

3.3 Configure Device Parameters via ISAPI

You can configure the device parameters via ISAPI protocol.

Before You Start

Add the device to the software. See **Add Device** for details.

Perform this task when you need to configure device parameters via ISAPI protocol.

Steps

1. Select one or more devices.
2. Click **Set via ISAPI** to open Set via ISAPI page.
3. Set the XML data.



Note

You can input XML data manually or import the XML file.

Example

For manually setting XML data, you can enter:

```
<Integrate version="2.0" xmlns="http://www.isapi.org/ver20/XMLSchema">
<CGI>
<enable></enable>
<certificateType></certificateType>
</CGI>
<ONVIF>
<enable>true</enable>
```

</ONVIF>

</Integrate>

4. Set the URL.

Example

You can enter: *PUT /ISAPI/System/Network/Integrate.*

5. Click **OK**.

3.4 Configure ONVIF

You can enable the ONVIF function and add user to manage or operate the device.

Before You Start

Add the device to the software. See **Add Device** for details.

Perform this task when you need to configure ONVIF.

Steps

1. Select one or more devices.
2. Click **ONVIF**.
3. Check **Enable ONVIF** to enable the ONVIF protocol.

The devices can be added via ONVIF.

4. Add user for managing the device.

- 1) Check **Add User**.
- 2) Select the user type.

Media User

The user can view the videos of the device.

Operator

The user can operate the device.

Administrator

The user can manage and operate the device.

- 3) Input the password and confirm password for the user to log in to the device.

5. Click **OK**.

3.5 Configure CGI

You can enable CGI function and select the CGI type for the device.

Before You Start

Add the device to the software. See **Add Device** for details.

Perform this task when you need to configure CGI.

Steps

1. Select one or more devices.
2. Click **CGI**.
3. Check **Enable CGI** to enable CGI function.
4. Select the CGI type.
5. Click **OK**.

3.6 Configure UPnP

You can enable or disable UPnP protocol for the device.

Before You Start

Add the device to the software. See **Add Device** for details.

Perform this task when you need to configure UPnP.

Steps

1. Select one or more devices.
2. Click **UPnP**.
3. Select **On** or **Off** to enable or disable UPnP protocol.

3.7 One-Touch Configure Online Device

You can one-touch configure the parameter settings, including ONVIF, CGI, UPnP, etc, and device upgrading settings, and parameter restoring settings. After one-touch configuration, you can apply the configurations to the device(s) on the SADP panel.

Before You Start

Make sure the devices (cameras, DVR, etc.) you are going to use are correctly installed and connected to the network as specified by the manufacturers. Such initial configuration is required in order to be able to connect the devices to the software via network.

Perform this task when you need to one-touch configure the online device(s).

Steps

1. Run the Batch Configuration software.
2. Click **One-Touch Configuration** on the SADP panel to open One-Touch Configuration page.
3. **Optional:** Input the password and confirm password for the inactive device.
4. Edit the device network parameters as desired.
5. Select the item(s) you want to configure.



Note

- For configuring upgrading settings, refer to .
- For restoring default parameters, refer to **Restoring Default Parameters** .
- For setting device parameters via ISAPI, refer to **Configure Device Parameters via ISAPI** .

- For setting wiper control, refer to **Wiper Control** .
 - For setting ONVIF configuration, refer to **Configure ONVIF** .
 - For setting CGI configuration, refer to **Configure CGI** .
 - For setting UPnP control, refer to **Configure UPnP** .
-

6. Check **Delete Device** or **Reboot Device** if you want to delete the device or reboot device after configuration.
7. Click **OK** to save the parameter configurations.
8. Select one or more devices.
9. Click **One-Touch Apply** on the SADP panel to apply the configuration to the selected device(s).

3.8 More Configurations

There're more configurations supported by the software, including wiper control, restoring default parameters, export devices, time synchronization.

Wiper Control

Enable or disable the wiper of the device if supported.

Restoring Default Parameters

Restore the device parameters to the default settings. Two restoration mode are available:

Part Restoration

Restore part parameters, excluding IP address, to the default settings. You can choose to reboot the device after restoration.

Complete Restoration

Restore all the parameters to the default and the device will reboot automatically.

Export Device

Select the devices and export the device information to your PC in CSV file.

Time Synchronization

Select the devices and sync the device time.

Chapter 4 Monitor Device

The device status (including HDD, resource, and camera), and port can be monitored. You can view the health status of your devices and quickly find the problems of your devices.

4.1 Monitor Device Status

The device status, including HDD status, resource status, and camera status can be monitored and you can view the status details.

Perform this task when you need to monitor the device status.

Steps


1. Click **Health Monitoring** to open the Health Monitoring page.
2. Click the **Status** tab.
3. Click **Test** to start testing the devices.
4. After testing the devices, you can view the result and device status statistics, such as HDD uninitialized statistics, resource hardware exception statistics, camera not recording statistics, and so on.
5. **Optional:** Click **Details** to view the monitoring result details of each module.

4.2 Monitor Port Status

The port status can be monitored. You can view the monitoring result and know whether the port is available.


Perform this task when you need to monitor port status.

Steps

1. Click **Health Monitoring** to open the Health Monitoring page.
2. Click the **Port** tab.
3. **Optional:** Click  to edit the port you want to monitor.

Note

By default, the port 80, 8000, 554 and 23 will be tested.

4. Test the port status.
 - Click  to get the latest port status of the selected device.
 - Click **Test** to get the latest port status of all the devices in the list.

The result displays on the Port Status column. Port in the [] indicates the port is exceptional.

4.3 Export Monitoring Report

After monitoring the device status, network status, and port status, the monitoring report can be generated and you can export the report to your PC.

Perform this task when you need to export the monitoring report.

Steps

1. Click **Health Monitoring** to open the Health Monitoring page.
2. Click the **Report** tab.
3. Set the report name.
4. Select a local saving path.
5. Click **Export**.



Note

The report is in CSV format.

You can view the device information, resource status, HDD status, camera status, and network status in CSV file.

Chapter 5 Upgrade Device via Local File


You can select a specific upgrade file from the local PC and upgrade the device via the file.

Before You Start

Add the device to the software. For details, refer to **Add Device**.

Perform this task when you need to upgrade the device via a local file.


Steps

1. Select one or more devices which need upgrade.
2. Open Upgrade page.
 - Click **Upgrade**.
 - Click  in the Operation column.



Note

It is only available for the online devices.

3. Select **File Upgrade** as the upgrading mode.
4. Click  and select the file.
5. Select the restoration mode.

Part Restoration

Restore the parameters, excluding IP address, to the default settings.

Complete Restoration

Restore all parameters to the default settings.

6. **Optional:** Check **Reboot Device after Upgrading**.
-



Note

This is only available for Part Restoration.

The device will be rebooted after upgrading.

7. **Optional:** Check **Delete Device after Upgrading**.

The device will be removed from the device list after upgrading.

8. Set the maximum device number for upgrading at the same time.


If the device number in upgrading exceeds the limit, the extra tasks will start one by one only after one upgrading task completes.

9. Click **OK**.

Result

The software starts upgrading via the file. You can view the upgrading progress of each device in Upgrade column and the total upgrading progress of all the selected devices.

After upgrading completed, you can view the total, succeeded, and failed upgrading task number.

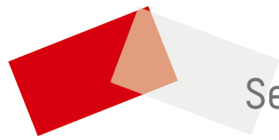

See Far, Go Further